

Model	Tethering Cable (USB-C Port)			Tethering Cable (USB-A Port)	Cable Management	Tethering Software	Onsite Relay	Onsite Battery	Onsite Coupler
Canon EOS R	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	TG020/ TG098/ TB-MC-005/ TB-QR-0046	SMRT5	ORC115	SDAC30/ SDAC150W CRCE6
Canon EOS R5	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRCE6
Canon EOS R6	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRCE6
Canon EOS R6 Mk II	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	—	ORC115	SDAC30/ SDAC150W CRCE6
Canon EOS R7	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRCE6
Canon EOS R8	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	—	ORC115	SDAC30/ SDAC150W CRCE6
Canon EOS R50	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRCE17
Canon EOS 5D MK III	CUC2415-ORG/	CUC2415-BLK			CU5451/ CU5450	"	"	ORC115	SDAC30/ SDAC150W CRCE6
Canon EOS 5D MK IV	CUC3315-ORG/	CUC3315-BLK/	CUC31B-ORG/	CUC31RB-ORG	CU5454/ CU5453	"	"	ORC115	SDAC30/ SDAC150W CRCE6
Canon EOS 6D MK II	CUC2415-ORG/	CUC2415-BLK			CU5451/ CU5450	"	"	ORC115	SDAC30/ SDAC150W CRCE6
Fuji GFX 100 II	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	TG020/ TG098/ TB-MC-005/ TB-QR-0046	SMRT5	ORC115	SDAC30/ SDAC150W CRFW235
Fuji XT5	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRFW235
Fuji XT3/ XT4	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRW126
Nikon D500	CUC3315-ORG/	CUC3315-BLK/	CUC31B-ORG/	CUC31RB-ORG	CU5454/ CU5453	TG020/ TG098/ TB-MC-005/ TB-QR-0046	SMRT5	ORC115	SDAC30/ SDAC150W CRN5B-C
Nikon D750	CUC2615-ORG				CU8015-ORG	"	"	ORC115	SDAC30/ SDAC150W CRN5B-C
Nikon D850	CUC3315-ORG/	CUC3315-BLK/	CUC31B-ORG/	CUC31RB-ORG	CU5454/ CU5453	"	"	ORC115	SDAC30/ SDAC150W CRN5B-C
Nikno Zf	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	—	ORC115	SDAC30/ SDAC150W CRN5B-C
Nikon Z6 II	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRN5B-C
Nikon Z7 II	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRN5B-C
Nikon Z8	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	—	SDAC30/ SDAC150W
Nikon Z9	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC17 CRND4 (+ Nikon EP-6)
Sony a7 V	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	TG020/ TG098/ TB-MC-005/ TB-QR-0046	SMRT5	ORC115	SDAC30/ SDAC150W CRNPFZ100
Sony a7 IV	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRNPFZ100
Sony a7C II	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	—	ORC115	SDAC30/ SDAC150W CRNPFZ100
Sony a7C R	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	—	ORC115	SDAC30/ SDAC150W CRNPFZ100
Sony a7s III	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRNPFZ100
Sony a7 III	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRNPFZ100
Sony a1	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	"	ORC115	SDAC30/ SDAC150W CRNPFZ100
Sony ZV-1 II	CUC15-ORG/	CUC15-BLK/	CU31-ORG/	CU31R-ORG	CUC3215-ORG/ CUC3215-BLK	"	—	—	SDAC30/ SDAC150W